

bubbies bouncing cradle

user guide

WARNING - Important Keep for future reference

introduction

This bouncing cradle is designed for babies who cannot sit up by themselves (6 months approximately; until 9kg) and features hanging toys for your child's entertainment.

Warning! - Do not use once baby starts to sit up unaided, and never attempt to pick the cradle up by the toybar. For your child's safety the toybar will detach if such an attempt is made.

2 parts checklist



description

Base frame

Backrest frame

Seat cover

Toybar and toys

preparation for use



Pull bar (A) right around until it locks into place against the hinges.

Next, lower the footrest frame.


When fully open, the frame will look as shown in diagram 2 below.



Place the frame on the floor with the open tubes pointing upwards.

Insert the ends of the backrest frame into these open tubes.

The retaining buttons will 'click' through holes in the lower tubes when properly located.

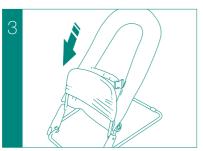

Lift the footrest frame to the upright position.


The seat cover has two 'sleeves'. Slide the larger of these over the backrest frame bar and the smaller sleeve over the footrest frame.



Press the footrest down towards the floor until it locks into place, holding the seat cover taut.

preparation for use

attaching the toybar

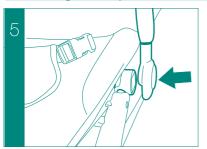


Locate the ends of the toybar over the sockets on the side mouldings.

Note: For your child's safety, the toybar will detach if you try to lift the cradle by the toybar.


the harness



To secure your child in the harness, place the crotch strap between their legs and insert the harness prongs into the buckle, making sure the child's fingers are clear.

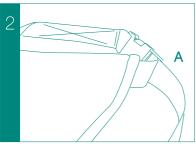

Adjust the strap adjuster (A) to get a snug fit around your child.

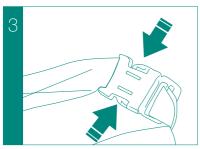

To release the harness, squeeze the buckle prongs together.

after use

to fold



The cradle can be folded for storage. First remove the toy bar, then pull the base around to rest against the seat cover.



The footrest can also be folded up against the seat.

care of your product



The seat cover can be removed for cleaning.

Lift the footrest up then pull the whole seat cover off from the top.
Clean in accordance with the care instructions printed on the back.

- Ensure that all metal parts are removed from cover before cleaning.
- Ensure the frame is correctly re-assembled before use, by following the instructions in section 3, preparation for use.
- Regularly check that the frame remains securely assembled and that the fabric and stitching is undamaged.

7 safety warnings

- WARNING Never leave the child unattended in the cradle.
- WARNING It is dangerous to put this cradle on an elevated surface, such as a worktop or bed.
- Do not use near an open fire or any other kind of heater.
- Keep children away from the cradle during set-up and when not in use.
- Never use as a child restraint in a vehicle.
- Never pick the cradle up with baby in it.
- Do not use near stairs or steps.
- Ensure the safety harness is fastened and correctly adjusted at all times.
- Regularly check for loose or damaged parts and discontinue use should parts become damaged or broken.
- Do not use once the child starts to sit up unaided.
- Never use the toybar as a carrying handle.
- Do not use replacement parts or accessories other than those approved by Mothercare as they may make the cradle unsafe.