
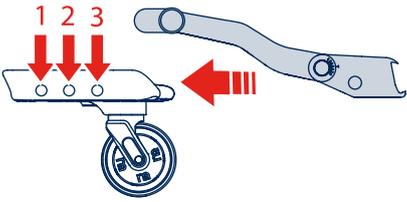
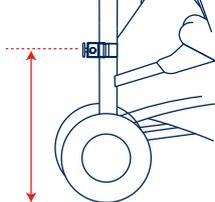
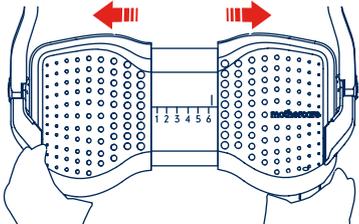
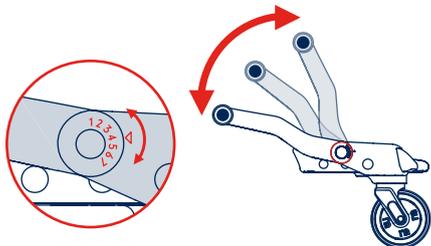


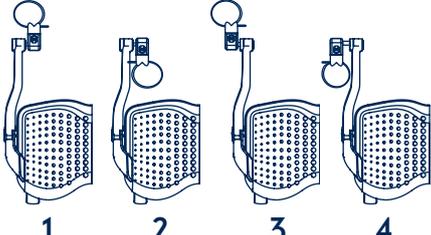

hop on stroller platform - fitting guide

Before you purchase the hop on stroller platform please check the compatibility guide (link on the product detail page) to find out if it is compatible with your pushchair or stroller.

Below are general fitting instructions, however please ensure you use these in conjunction with the specific fitting guide for your pushchair in the table below.

| | | | |
|---------------------------------------|---------------------------------------|---|---|
| Arm fixing point: | Refer to Step 3 & 4 of the user guide | Slide the arms on either side of the board, align the appropriate holes as indicated and secure with the screw. |  |
| Pushchair component fitted to: | Refer to Step 5 of the user guide | Undo the screw on the clamp and remove the wedge. Wrap the strap around the indicated component and refasten by pulling the strap tight then reassembling the wedge and screw and tightening. | |
| Height of fixing point: | Refer to Step 5 of the user guide | Check the position of the clamp by measuring from the floor to the center of the screw. |  |
| Board width: | Refer to Step 6 of the user guide | Undo the screw underneath the board and adjust the width as indicated. Retighten the screw underneath. |  |
| Arm angle: | Refer to Step 7 of the user guide | Loosen the screws on either side, slide the arms out and adjust the angle to the position indicated. Push the arms towards the board to locate them and retighten the screws. |  |
| Ball joint orientation: | Refer to Step 8 & 9 of the user guide | Undo the screw holding the ball joint into place using a coin or flat blade screwdriver. Remove the joint and reposition as indicated. Secure using the screw. |  |

Continue for specific pushchair fitting instructions.

Please refer to the below table for correct fitting settings for your make and model of pushchair or stroller.



| Brand | Model | Arm fixing point (1-3) | Pushchair component fitted to: | Height of fixing point (mm) | Board width (closed - 6) | Arm angle (1-7) | Ball joint orientation (1,2,3,4) | Fit rating Red, Amber, Green | Notes |
|-------------|-------------------|------------------------|--------------------------------|-----------------------------|--------------------------|-----------------|----------------------------------|------------------------------|--|
| Baby Jogger | City Mini | 1 | Rear leg | 300 | 6 | 3 | 1 | Green | |
| Baby Jogger | City Mini Twin | 1 | Rear leg | 200 | Closed | 5 | 3 | Green | |
| Baby Jogger | City Select | 1 | Rear leg | 315 | Closed | 3 | 3 | Green | |
| BabyStyle | Oyster | 1 | Rear leg | 320 | 0 | 3 | 3 | Amber | Lift to access the brakes. |
| BabyStyle | Oyster Max Single | 3 | Rear legs | 248 | Closed | 4 | 3 | Amber | Lift to access the brakes. |
| BabyStyle | Oyster Max Tandem | N/A | N/A | N/A | N/A | N/A | N/A | Red | Rear seat prevents fitting. |
| Britax | B-Agile | 1 | Rear leg | 215 | Closed | 4 | 3 | Green | |
| Britax | B-Agile Twin | 1 | Crossbar | N/A | 6 | 4 | 3 | Green | |
| Britax | B-Dual 4 | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. Use 2nd seat. |
| Britax | B-Smart 3 | 1 | Axle | N/A | Closed | 7 | 1 | Green | |
| Britax | Vigour | 1 | Rear leg | 260 | Closed | 4 | 3 | Green | |
| Bugaboo | Bee | 1 | Rear leg | 340 | 6 | 3 | 1 | Green | |
| Bugaboo | Cameleon | 1 | Axle | N/A | Closed | 6 | 2 | Green | |
| Bugaboo | Donkey | 1 | Rear leg | 305 | Closed | 3 | 3 | Amber | Access to brakes restricted. Board width 6 with 2 seats. |
| Chicco | Ct0.6 | 1 | Rear leg | 175 | 6 | 6 | 2 | Green | |
| Chicco | Lite Way | 1 | Rear leg | 300 | 5 | 4 | 2 | Green | |
| Chicco | Multiway | 1 | Rear leg | 415 | 6 | 1 | 1 | Green | |
| Combi | We 2 | 1 | Rear leg | 190 | 2 | 5 | 1 | Green | Left or right hand fitting. |
| Concord | Neo Quantum | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. |
| Cosatto | Duet Lite | 1 | Rear leg | 300 | 6 | 4 | 1 | Green | |

Continued...

Please refer to the below table for correct fitting settings for your make and model of pushchair or stroller.



| Brand | Model | Arm fixing point (1-3) | Pushchair component fitted to: | Height of fixing point (mm) | Board width (closed - 6) | Arm angle (1-7) | Ball joint orientation (1,2,3,4) | Fit rating Red, Amber, Green | Notes |
|--------------------------|---------------|------------------------|--------------------------------|-----------------------------|--------------------------|-----------------|----------------------------------|------------------------------|--|
| Cosatto | Yo | 3 | Rear leg | 355 | 6 | 3 | 1 | Green | |
| Cosatto | Sunburst | 1 | Rear leg | 300 | Closed | 4 | 4 | Amber | Folds but frame will not lock closed. |
| Easywalker | Duo | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. |
| Graco | Duo Sport | 1 | Rear leg | 280 | 6 | 4 | 3 | Green | |
| Graco | Evo Mini | 1 | Rear legs | 225 | Closed | 5 | 3 | Green | |
| Graco | Evo | 2 | Rear leg | 255 | Closed | 4 | 3 | Green | |
| Graco | Mosaic | 3 | Rear leg | 315 | 6 | 4 | 1 | Green | |
| Jane | Powertwin Pro | 1 | Rear leg | 265 | Closed | 4 | 3 | Green | |
| Joovy | Caboose | 1 | Lower handle | 410 | 6 | 2 | 1 | Green | |
| Maclaren | Cath Kidston | 2 | Rear leg | 380 | 5 | 4 | 2 | Green | |
| Maclaren | Globetrotter | 1 | Rear leg | 255 | 6 | 4 | 2 | Green | |
| Maclaren | Grand Tour LX | 1 | Rear leg | 160 | 1 | 2 | 3 | Amber | Cannot be fully folded. |
| Maclaren | Juicy Couture | 2 | Rear leg | 290 | 6 | 4 | 2 | Green | |
| Maclaren | Quest Sport | 2 | Rear leg | 380 | 5 | 4 | 2 | Green | |
| Maclaren | Techno XLR | 1 | Rear leg | 410 | 6 | 3 | 2 | Green | |
| Maclaren | Techno XT | 2 | Rear leg | 290 | 6 | 4 | 2 | Green | |
| Maclaren | Triumph | 1 | Rear leg | 280 | 4 | 4 | 1 | Green | |
| Maclaren | Twin Techno | 3 | Rear leg | 350 | 3 | 3 | 1 | Green | Left side only (viewed from the back). |
| Maclaren | Twin Triumph | 3 | Rear leg | 320 | 3 | 3 | 1 | Green | Left side only (viewed from the back). |
| Maxi Cosi | Mila | 3 | Rear leg | 265 | 0 | 4 | 3 | Green | |
| Maxi Cosi by Bebeconfort | Loola | 2 | Rear leg | 310 | Closed | 4 | 3 | Green | |

Continued...

Please refer to the below table for correct fitting settings for your make and model of pushchair or stroller.



| Brand | Model | Arm fixing point (1-3) | Pushchair component fitted to: | Height of fixing point (mm) | Board width (closed - 6) | Arm angle (1-7) | Ball joint orientation (1,2,3,4) | Fit rating Red, Amber, Green | Notes |
|--------------------------|---------------------|------------------------|--------------------------------|-----------------------------|--------------------------|-----------------|----------------------------------|------------------------------|---|
| Maxi Cosi by Bebeconfort | Loola Up | 2 | Rear leg | 310 | Closed | 4 | 3 | Green | |
| Mothercare | Amble | 1 | Rear leg | 370 | 1 | 2 | 1 | Green | |
| Mothercare | Baby K | 3 | Rear leg | 285 | 4 | 4 | 2 | Green | |
| Mothercare | Backspin | 2 | Rear leg | 300 | 5 | 3 | 2 | Green | |
| Mothercare | Backspin Plus | 1 | Rear leg | 360 | 5 | 3 | 1 | Green | Be aware of the increased risk of backward tipping. |
| Mothercare | Curv | 3 | Rear leg | 315 | 6 | 4 | 1 | Green | |
| Mothercare | Duolite | 1 | Rear crossbar | N/A | 4 | 5 | 4 | Green | Basket lifted slightly. |
| Mothercare | Flyte | 2 | Rear leg | 350 | 6 | 3 | 1 | Green | |
| Mothercare | Hoxton | 2 | Rear leg | 330 | 6 | 3 | 1 | Green | |
| Mothercare | Jive | 3 | Rear leg | 285 | 4 | 4 | 2 | Green | |
| Mothercare | Journey | 1 | Rear leg | 260 | 2 | 4 | 1 | Amber | Cannot be folded when fitted. Brake obstructed. |
| Mothercare | M-Bu | 3 | Rear leg | 185 | 3 | 5 | 1 | Green | |
| Mothercare | M-Bu Twin | 3 | Rear leg | 300 | 3 | 3 | 1 | Green | |
| Mothercare | Mino & Mino Plus | 1 | Rear leg | 295 | 6 | 4 | 2 | Green | |
| Mothercare | Movix | 1 | Rear leg | 320 | Closed | 3 | 3 | Green | |
| Mothercare | MPV | 3 | Rear leg | 300 | 3 | 4 | 1 | Green | Left side only (viewed from the back). |
| Mothercare | My Choice 3 Wheeler | 1 | Rear leg | 320 | Closed | 3 | 3 | Green | |
| Mothercare | My Choice 4 Wheeler | 1 | Rear leg | 320 | Closed | 3 | 3 | Green | |
| Mothercare | Nanu | 2 | Rear legs | 165 | 4 | 6 | 2 | Amber | Lift to access the brakes. |
| Mothercare | Nulo | 1 | Rear leg | 245 | 5 | 5 | 2 | Amber | Access to brake restricted. |
| Mothercare | Orb | 1 | Rear leg | 260 | Closed | 4 | 3 | Green | |

Continued...

Please refer to the below table for correct fitting settings for your make and model of pushchair or stroller.



| Brand | Model | Arm fixing point (1-3) | Pushchair component fitted to: | Height of fixing point (mm) | Board width (closed - 6) | Arm angle (1-7) | Ball joint orientation (1,2,3,4) | Fit rating Red, Amber, Green | Notes |
|------------|-------------------------------|------------------------|--------------------------------|-----------------------------|--------------------------|-----------------|----------------------------------|------------------------------|--|
| Mothercare | Phoenix | 2 | Rear leg | 310 | 6 | 4 | 1 | Green | |
| Mothercare | Pick & Mix | 1 | Rear leg | 330 | 6 | 3 | 2 | Green | |
| Mothercare | Spin | 1 | Rear leg | 260 | Closed | 4 | 3 | Green | |
| Mothercare | Swoop | 1 | Rear leg | 260 | 6 | 4 | 1 | Green | |
| Mothercare | Trenton Deluxe | 1 | Rear leg | 190 | 6 | 5 | 1 | Amber | Head room for child restricted. |
| Mothercare | U Move Black Stripes SS10 | 1 | Rear leg | 290 | 6 | 4 | 1 | Green | |
| Mothercare | U Move Navy/ Red Circles AW11 | 1 | Rear leg | 275 | 6 | 4 | 1 | Green | |
| Mothercare | Ultimate Collection | 1 | Rear leg | 320 | 6 | 3 | 2 | Green | |
| Mothercare | Urbanite | 1 | Rear leg | 410 | 4 | 1 | 1 | Green | |
| Mothercare | Valday | 3 | C shaped tube | 225 | Closed | 5 | 3 | Green | Chassis fixing must be angled outwards. |
| Mothercare | Vesta | 1 | Rear leg | 230 | 6 | 5 | 1 | Green | |
| Mothercare | Vesta Twin | 1 | Axle | N/A | Closed | 6 | 4 | Green | |
| Mothercare | Vio Switch - Pram Mode | N/A | N/A | N/A | N/A | N/A | N/A | Red | Pram gets in the way of child standing at the back. |
| Mothercare | Vio Switch - Seat Mode | 1 | Rear legs | 140 | Closed | 6 | 3 | Green | |
| Mothercare | Whizzi | 2 | Rear leg | 280 | 5 | 4 | 2 | Green | |
| Mothercare | Xcursion | 1 | Rear leg | 380 | 2 | 2 | 3 | Green | |
| Mothercare | Xoob | 1 | Rear leg | 245 | 5 | 5 | 2 | Amber | Access to brake restricted. |
| Mothercare | Xoob2 | 3 | Rear leg | 355 | 5 | 3 | 1 | Green | Must be fitted behind the left seat. Be aware of the increased risk of backward tipping. |
| Mothercare | Xpedior | 3 | Rear leg | 222 | Closed | 4 | 3 | Green | Ensure fittings are not around the brake cable. |
| Mothercare | Xtreme | 1 | Rear leg | 340 | 6 | 3 | 1 | Green | |

Continued...

Please refer to the below table for correct fitting settings for your make and model of pushchair or stroller.



| Brand | Model | Arm fixing point (1-3) | Pushchair component fitted to: | Height of fixing point (mm) | Board width (closed - 6) | Arm angle (1-7) | Ball joint orientation (1,2,3,4) | Fit rating Red, Amber, Green | Notes |
|-------------|-------------------|------------------------|--------------------------------|-----------------------------|--------------------------|-----------------|----------------------------------|------------------------------|--|
| Mothercare | Journey | 1 | Rear leg | 260 | 2 | 4 | 1 | Amber | Cannot be folded when fitted. |
| Mothercare | Amble | 1 | Rear leg | 370 | 1 | 2 | 1 | Green | |
| Mothercare | Nanu (new) | 1 | Rear leg | 420 | 4 | 1 | 1 | Amber | Lift to access the brakes. |
| My Chld | Sienta Duo Tandem | 2 | Rear leg | 315 | 6 | 3 | 1 | Green | |
| Obaby | Atlas | 1 | Rear leg | 300 | 5 | 4 | 2 | Green | |
| Obaby | Atlas Sport | 1 | Rear leg | 300 | 5 | 4 | 2 | Green | |
| Petite Star | Zia 3 | 1 | Lower horizontal bar | N/A | 6 | 6 | 2 | Green | |
| Phil & Teds | Classic Twin | 1 | Axle | N/A | Closed | 7 | 3 | Amber | Handle must be in upper position. Must be positioned centrally so that brake is not inhibited. |
| Phil & Teds | Explorer | 1 | Rear leg | 210 | 0 | 5 | 3 | Green | |
| Phil & Teds | Smart Buggy | 2 | Rear leg | 325 | 6 | 3 | 1 | Green | |
| Phil & Teds | Sport | 1 | Rear leg | 125 | Closed | 3 | 3 | Amber | Access to brake restricted. Only use without the doubles kit. |
| Phil & Teds | Vibe | 1 | Rear leg | 120 | 2 | 3 | 3 | Green | Only use without the doubles kit. |
| Quinny | Buzz 2011 | 1 | Upper oval tube | 365 | Closed | 3 | 3 | Amber | Chassis fixing must be angled outwards. |
| Quinny | Buzz 3 | 1 | Upper oval tube | 365 | Closed | 3 | 3 | Amber | Chassis fixing must be angled outwards. |
| Quinny | Buzz 4 | 1 | Upper oval tube | 365 | Closed | 3 | 3 | Amber | Chassis fixing must be angled outwards. |
| Quinny | Moodd | 1 | Upper oval tube | 365 | Closed | 3 | 3 | Amber | Chassis fixing must be angled outwards. |
| Quinny | Senzz | 1 | Rear legs | 250 | 0 | 4 | 3 | Green | |
| Quinny | Yezz | 1 | Arch rear frame support | 155 | Closed | 6 | 1 | Green | |
| Quinny | Zapp | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. |
| Quinny | Zapp xtra | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. |

Continued...

Please refer to the below table for correct fitting settings for your make and model of pushchair or stroller.



| Brand | Model | Arm fixing point (1-3) | Pushchair component fitted to: | Height of fixing point (mm) | Board width (closed - 6) | Arm angle (1-7) | Ball joint orientation (1,2,3,4) | Fit rating Red, Amber, Green | Notes |
|--------------|----------------|------------------------|----------------------------------|-----------------------------|--------------------------|-----------------|----------------------------------|------------------------------|---|
| Safety 1st | Technika | 2 | Rear leg | 395 | 6 | 2 | 1 | Green | |
| Safety First | Duo Deal | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. |
| Seed | Pli | 1 | Base side tube behind back wheel | 185 | 0 | 7 | 3 | Green | Brackets hang below the chassis. |
| Silver Cross | 3D | 3 | Rear leg | 340 | Closed | 3 | 3 | Green | |
| Silver Cross | Fizz | 1 | Side bars | 230 | 4 | 4 | 2 | Green | |
| Silver Cross | Halo | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. |
| Silver Cross | Linear Freeway | 1 | Rear leg | 290 | 2 | 4 | 3 | Green | |
| Silver Cross | Pop | 1 | Rear leg | 265 | 5 | 4 | 2 | Green | |
| Silver Cross | Pop Duo | 2 | Rear leg | 360 | 3 | 3 | 1 | Green | Right side only (viewed from the back). |
| Silver Cross | Pop Sport | 1 | Rear leg | 255 | 6 | 4 | 2 | Green | |
| Silver Cross | Surf | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. |
| Silver Cross | Zest | 1 | Rear leg | 300 | 5 | 3 | 2 | Green | |
| Silver Cross | Pop | 2 | Rear leg | 400 | 5 | 2 | 1 | Amber | Lift to access the brakes. |
| Stokke | Crusi - Single | 1 | Rear axle | 100 | Closed | 7 | 1 | Green | Arm fixing point may vary depending upon handle adjustment. |
| Stokke | Crusi - Tandem | 1 | Rear axle | 100 | Closed | 7 | 1 | Green | Arm fixing point may vary depending upon handle adjustment. |
| Stokke | Scoot | 3 | Rear leg | 140 | Closed | 6 | 3 | Amber | Ensure fittings are tight to prevent contact with the wheels. Ensure when fitted that there is no contact with the brake bar. |
| Stokke | Xplory | N/A | N/A | N/A | N/A | N/A | N/A | Red | Does not fit. |